

Written By: Daniel Kresge



INTRODUCTION

This guide show users how they can replace the buttons of the device.



TOOLS:

- [Magnetic Project Mat](#) (1)
 - [Metal Spudger](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Screwdriver](#) (1)
-

Step 1 — Case



- Remove the battery covers and the four batteries.

Step 2




- Remove the four plastic caps with a metal spudger to expose the 6.0 mm Philips JIS #0 case screws.
- Remove the eight 6.0 mm JIS #0 case screws.

Step 3




- Using a plastic opening tool, separate the two pieces of the case carefully.

Step 4 — Disassembling VTech MobiGo Touch Learning System Screen Enclosure

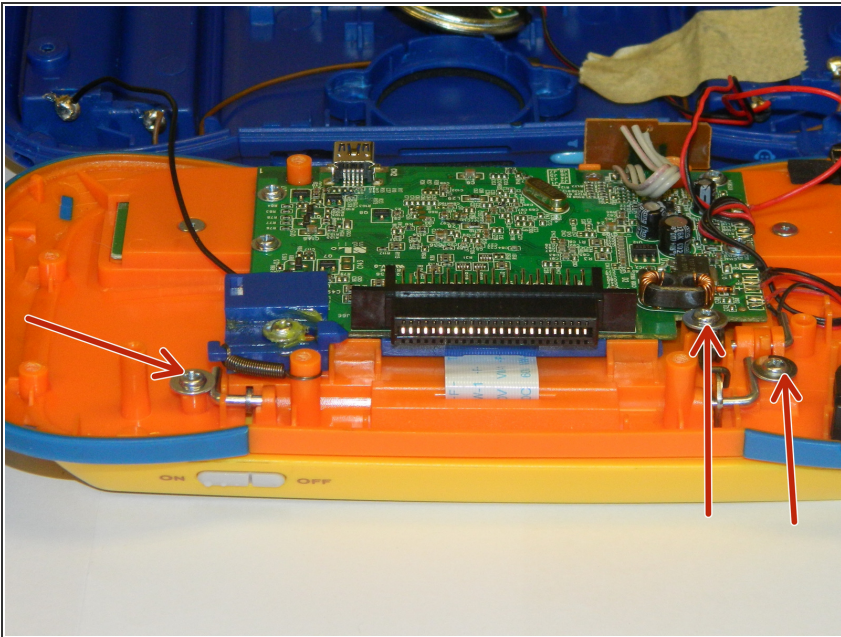


- Remove the three 4.0 mm Philips J0 screws holding the "L" shaped brackets in place.

Step 5

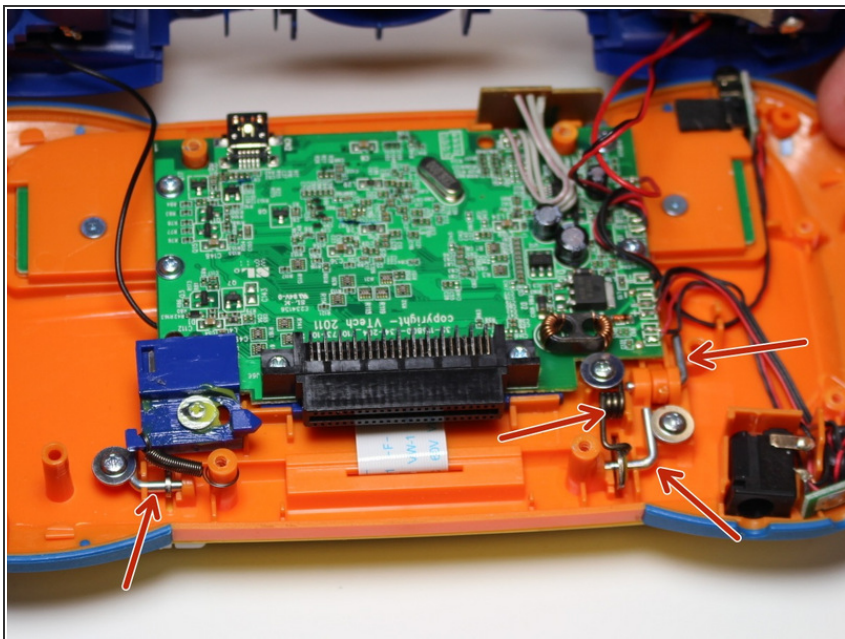

- Remove the three "L" shaped brackets and the spring.

Step 6

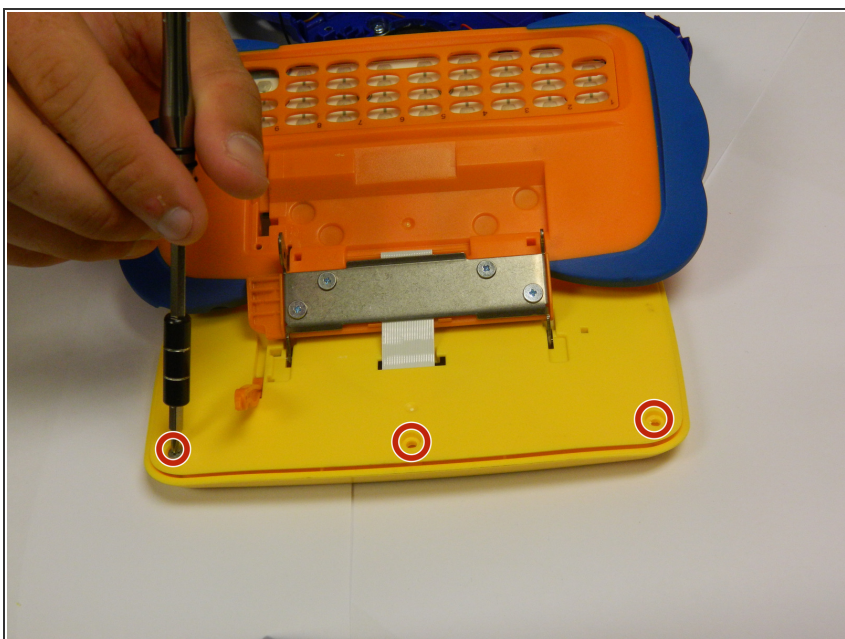


- Flip the device over and remove the three 4.0 mm Philips J0 case screws.

Step 7





- Separate the front and back of the case.
- ① Use a plastic opening tool if necessary.

Step 8 — Buttons

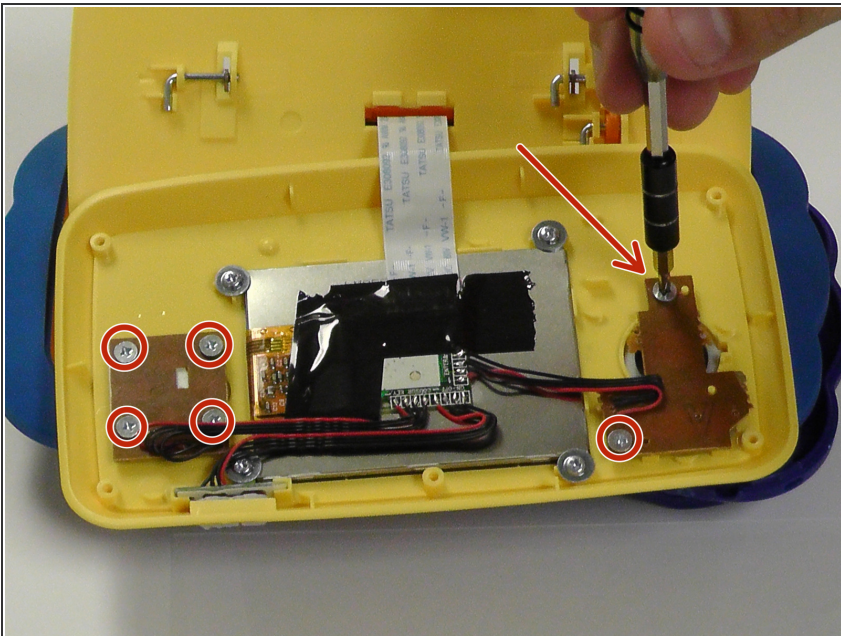

- Remove 6 (3.8 mm Philips J0) screws holding the buttons in.

Step 9

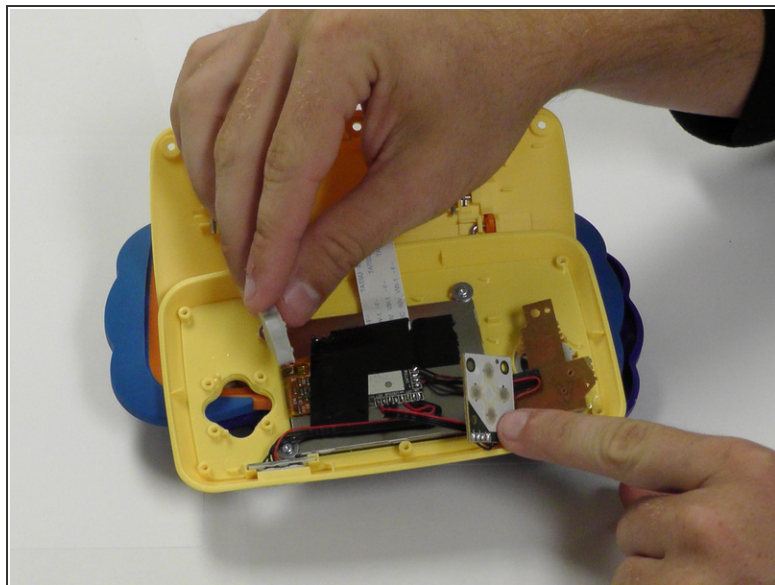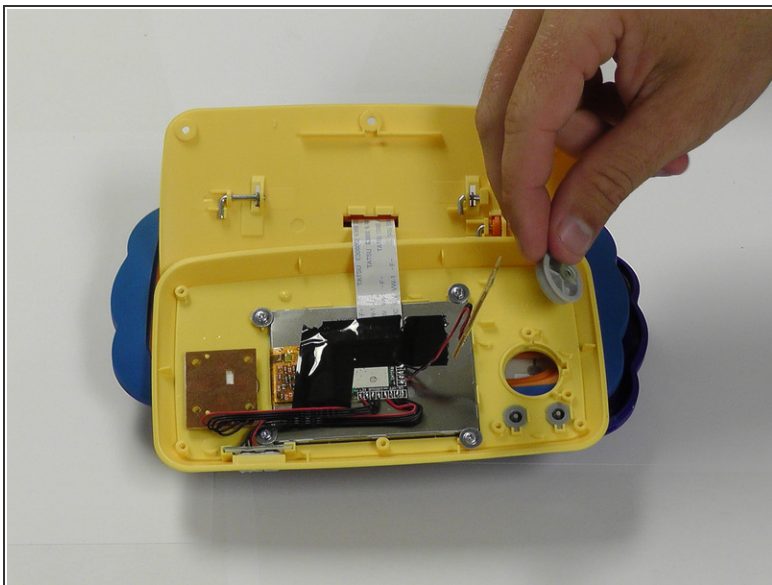

- From here you can remove and replace the buttons.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-10 10:05:36 PM.